


NB. INSTALL PINS AT CRACKS \leq 12" IN LENGTH AND/OR 1/16" IN WIDTH.

V.I.F.

V.I.F.

CUT OUT CRACK; CUT BEYOND END OF CRACK 1" min. TUCK-POINT w/ REPAIR MORTAR.

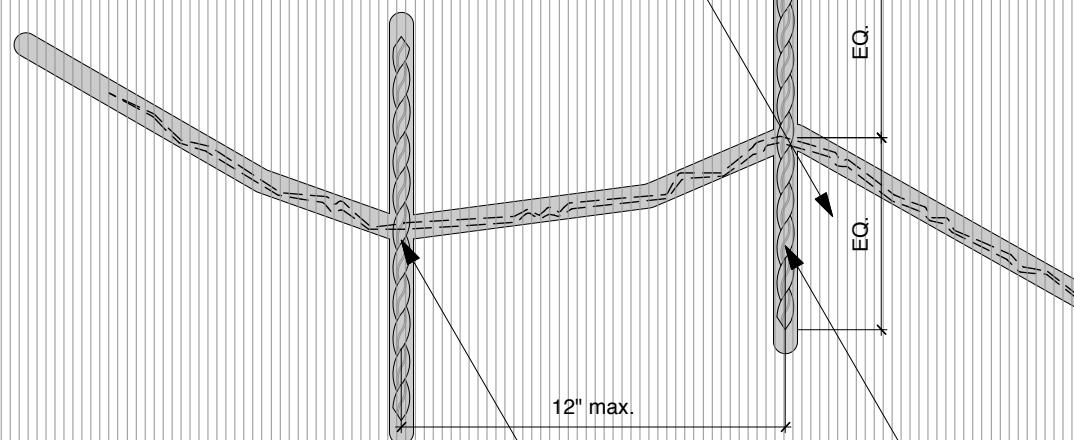

(N) SST HELICAL WALL TIE INSTALLED ACROSS CRACK. SET IN EPOXY; RECESS 1" min. FROM FACE OF MASONRY. TUCK-POINT REMAINDER w/ REPAIR MORTAR.

ELEVATION.

CUT OUT & POINT CRACK.

(N) SST HELICAL WALL TIE.

1" min.

SECTION.

1

BROWNSTONE CRACK REPAIR

Scale: 3" = 1'-0"